


# IC-4088SR

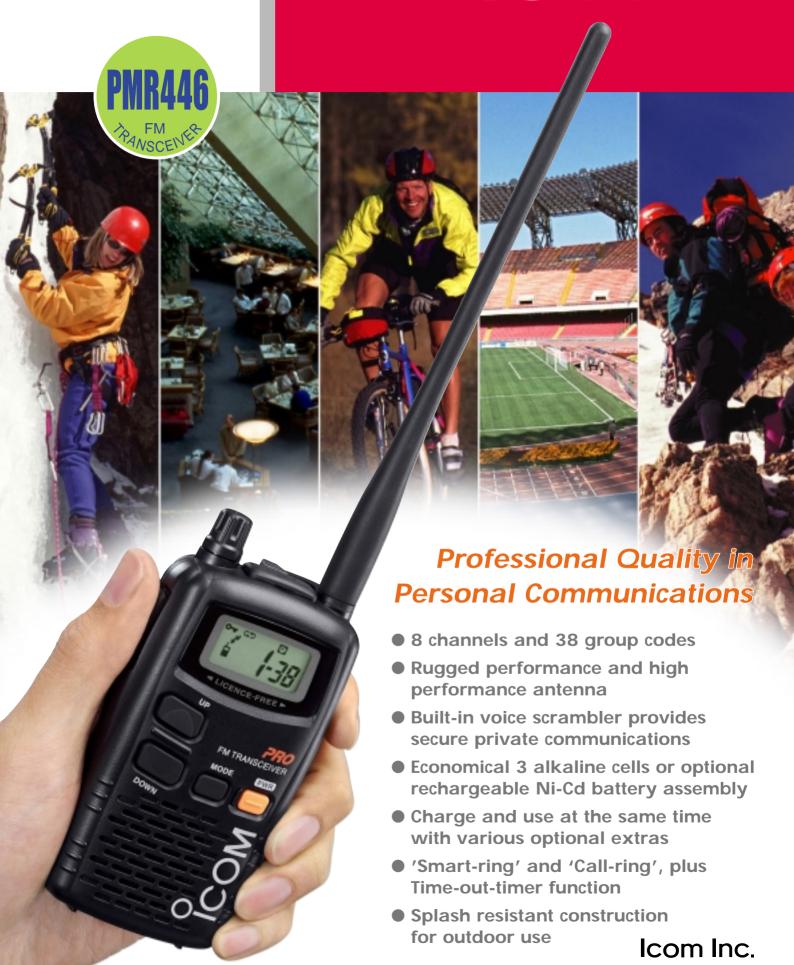

### C-4088SR

#### **SPECIFICATIONS**

Number of channels

Mode

· Frequency stability

Frequency resolution

Battery requirements

• External power supply

• Current drain (at 4.5V DC) • Operating temperature range

• Number of CTCSS frequencies

Weight

Output power

• External microphone connector

• Sensitivity (12dB SINAD)

Audio output power

• External SP connector

• Battery life (Tx:Rx:Standby=1:1:8)

· 8 (simplex: 446 00625-446 09375MHz)

· FM (F3F)

: ±2.5kHz, ±5.6ppm

: 12.5kHz

: 3 × AA(R6) alkaline cells;

or optional BP-202 : 6.0V DC ±5%

(with BC-149D, CP-18E)

: Less than 500mA

: -20°C to +55°C : 38 (67.0-250.3Hz)

: 200g (includes 3 alkaline cells)

500mW ERP

3-conductor 2.5 (d) mm/2.2k $\Omega$ 

: 0.158uV typical : More than 100mW

at 10% distortion with an  $8\Omega$  load

: 3-conductor 3.5 (d) mm/8 $\Omega$ 

Battery type	Battery life
3 alkaline cells	approx. 28 hrs.
Optional BP-202	approx. 10 hrs.

• Communication range\* (approx.) : 3km (Wide, open space)

\* Communication range may differ depending on weather conditions, etc.

#### All stated specifications are subject to change without notice or obligation.

\* Simple licence is required in some countries. Voice scrambler not available in some countries.

## **DIMENSIONS** 271.2mm 115.6mm 102 5mm 26.9mm 52.5mm 60.5mm

#### **OPTIONS**



Install into the battery cell space in the transceiver. 3 6V/700mAh



6V DC, 1A output AC adapter. Charges the BP-202, while operating the radio.



6V DC, 2A output from 12V cigarette lighter socket with internal DC-DC converter




Rapidly charges installed Ni-Cd battery cell assembly, BP-202. The charger adapter and the AC adapter supplied with the BC-119N depending on version. Charging time: 75 to 85 min.



: Compact and lightweight. Equipped with an earphone jack. HM-75A : Allows you to remotely select operating channels, etc.

Durable body. Equipped with an earphone jack and revolving clip. HM-128 : Light weight and compact earphone-microphone with PTT

switch that clips to your lapel.

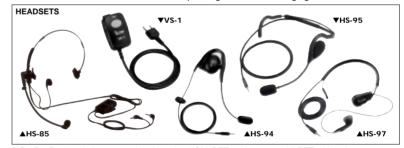

**HS-85**: For hands-free operation. Includes VOX, PTT and "one-touch" PTT with a time-out timer. : PTT/VOX unit. Required when using the HS-94, HS-95 and HS-97 with the transceiver.

Earhook headset with flexible boom microphone. HS-94:

HS-95 : Behind-the-head headset with flexible boom microphone. HS-97: Throat microphone fits around your neck comfortably.

#### Icom Inc.

DIKMANS TELECOM SERVICE B.V. Rivierdijk 751 3371 EK HARDINXVELD-GIESSENDAM

Telefoon : +31(0)184-630111 : +31(0)184-630022 Telefax E-mail : info@dikmans.nl Website : www.dikmans.nl